

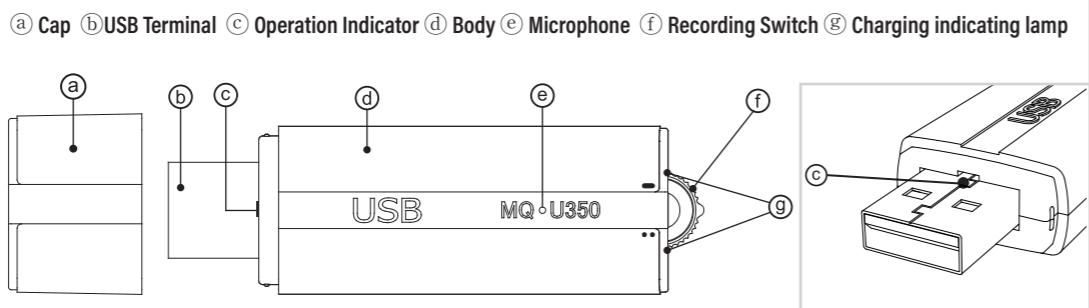
**⚠ Cautions for Use**

- RecorderGear is not responsible for the loss of recordings caused by misuse, improper handling, or technical issues.
- We are not liable for damage or third-party claims resulting from the use of this product.
- Don't disassemble, modify, drop, or expose the device to extreme heat, cold, or humidity; it may result in permanent damage.
- To avoid loss of important data, back up your recordings to a computer regularly.

**⚠ FCC Compliance**

This device meets FCC rules designed to limit radio interference (Class B, Part 15).

**What You Should Know:** Do not modify the device. Unauthorized changes may make it illegal to use. If this device causes interference with radio or TV reception, try:  
 1. Moving the device or antenna 2. Increasing the distance between devices 3. Plugging into a different outlet 4. Consulting a technician for help

**FD50 Diagram**

**Charging**

The FD50 has a built-in rechargeable battery. Please charge fully before first use.  
 To charge: 1. Plug the USB connector (b) USB Plug into a computer or certified USB charger (5V/500mA+). 2. Charging will begin automatically. 3. When charging is complete, the charging indicator will blink.

**⚠** Use only certified chargers. Using an unsupported adapter may damage the device and void warranty coverage.

**Connecting Computer (USB)**

1. Set the Recording Switch (f) to STOP, then plug the FD50 into your PC's USB port. 2. The device will appear as a removable drive labeled "MEMOQ". 3. From there, you can copy, delete, rename, or play recordings directly on your computer.

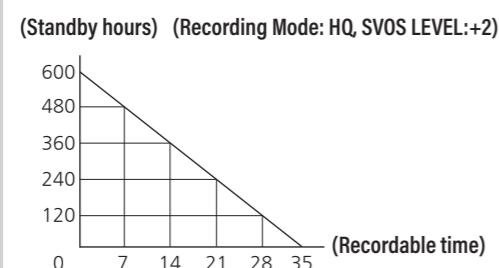
**💡** Use any music or audio playback software that supports MP3 files.

**⚠** Always perform "Safely Remove Hardware" before unplugging.  
**⚠** Forcibly removing the device may cause file corruption or serious errors.

**Battery Level Indicator**

When recording begins — or when you unplug the device from a computer or USB charger — the (c) Operation Indicator light will briefly show the battery status.

Operation indicator	Not turned on	Blinking for 5 seconds	Turn on for 5 seconds
Battery remains	Insufficient 0~30%	Normal 30~70%	Sufficient 70~100%

**Record Time vs Standby Time**


In SVOS (Sound-Activated Recording) mode, the FD50 enters standby when no sound is detected. This helps extend battery life dramatically. • On a full charge, the device can remain in standby for up to 25 days (~600 hours). • Actual standby time decreases as more audio is recorded. • The chart below shows the trade-off between recording time and standby duration, assuming:  
 1. Recording Mode: HQ 2. SVOS Level: +2 (very sensitive)

**⚠** Actual results may vary depending on noise levels, usage habits, and SVOS sensitivity settings.

**Specifications**

Model	FD50	
Recording time	Memory	32GB 64GB
	PCM	About 96 Hrs About 192Hrs
	XHQ	About 576Hrs About 1152Hrs
	HQ	About 1152Hrs About 2304Hrs
Hours of battery use	PCM	About 16Hrs
	XHQ	About 28Hrs
	HQ	About 35Hrs
Super Voice Operated (SVOS)	Recording standby time : about 25days Voice detection level : about 52~64dB(A)	
Max number of recording files	9,999 Files	
Dimensions, Weight	(W)68 x (D)11 x (H)21mm, 14.7g	
Battery type	3.7V, Li-Polymer 180mAh	
Usage environment	Temperature:0~40°C, Humidity:20~80%	
Accessory	User's manual	

**Warranty Card**

Product name	USB Memory & Voice Recorder
Model no.	FD50
Purchasing date	
Purchasing place	
Tel.	
Etc.	
Warranty Period	One year from purchasing date
Customer	Name _____ Address _____ Tel. _____

**Not Covered Under Warranty**

- Damage caused by misuse, dropping, or careless handling
- Any modification or disassembly performed by the user
- Damage resulting from natural disasters (e.g., fire, flooding, salt exposure, earthquakes)
- Issues that occur after the warranty period has expired
- Cases where replacement parts are required due to wear or damage

**⚠** Specification can be changed for product improvement without prior notice.

**Setting the Date & Time**  
(windows only)

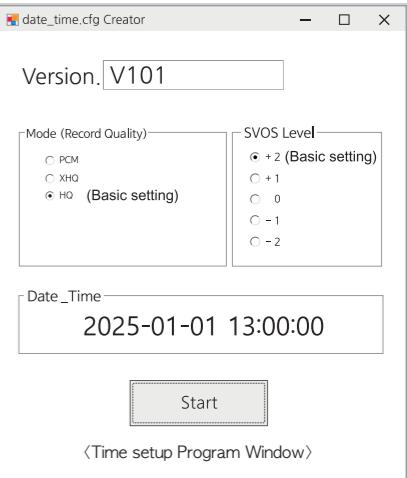
To ensure recordings are saved with the correct date and time, use the built-in Time Setup program on the FD50.

**✓ How to Set the Time:**

- Plug the device into your PC using the (b) USB terminal.
- Open the file named "TIME SETUP" (stored inside the FD50).
- Choose your Recording Quality and SVOS Level if needed.
- Click the Start button.
- Once the file DATE\_TIME.CFG is created, immediately unplug the device to complete setup.

**⚠ Important Notes:**

- This program only works on Windows OS.
- The date and time displayed are pulled from your PC — make sure your computer clock is accurate.
- If you don't unplug the device right after clicking Start, your timestamp may not set.
- If you leave the device connected too long after pressing Start, the setting will not save.


**Time Setting Options - Explained**
**1. Recording Quality (MODE)**

This setting determines the sound quality and file size of your recordings.

- PCM, Lossless "Uncompressed" (705 kbps / 44.1 kHz)
- XHQ, Ultra High Quality (128 kbps / 32 kHz)
- HQ, High Quality (64 kbps / 16 kHz)

**💡** Quick Tip: Higher quality = better audio, but uses more battery and memory.

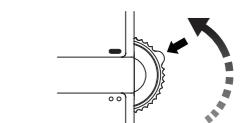
**2. SVOS LEVEL (Sound Activation Sensitivity)**

When SVOS Mode is active, the recorder will only capture sound when it detects noise. The SVOS LEVEL setting controls how sensitive the device is to sound. +2 Very Sensitive ~52 dB(A) (soft sounds) • +1 Sensitive ~55 dB(A) • 0 Normal (Default) ~58 dB(A) • -1 Less Sensitive ~61 dB(A) • -2 Least Sensitive ~64 dB(A) (only loud sounds)

 

**Continuous Recording**

- Rotate the (f) Recording Switch toward the (stop) icon.
- After about 5 seconds, recording begins automatically if there is enough battery.
- To stop, rotate the switch to the STOP position — the (c) Operation Indicator will flash 3 times to confirm the file was saved.

**💡** Quick Tip: Files are automatically split every 5 hours into separate MP3 files.

**Continuous recording**

**SVOS Recording (Sound Activated)**

- Rotate the (f) Recording Switch toward the (recording) icon.
- After about 5 seconds, the device enters standby. Recording begins only when sound is detected.
- If silence continues for 1 minute, it automatically pauses and returns to standby.
- To stop, return the switch to STOP — the (c) Operation Indicator will flash 3 times.



**⚠ Note:** SVOS is energy efficient, but may miss very quiet sounds. For important recordings, we recommend using Continuous Mode.

**💡** Quick Tip: If the REC indicator is set to OFF in the Time Setup program, the LED will not blink during recording.


**Recording with External Power**

For long sessions, you can connect the FD50 to a USB power adapter or PC during recording.

**💡** Quick Tip: While plugged in, the device will record continuously and blink the indicator every 5 seconds.

Files are saved in the Voice folder. • Up to 9,999 recordings can be saved. • File names are timestamped using this format: R-00001\_YMMDDHHMM\_TYPE.MP3

• The file names are classified according to Normal Recording (REC) / SVOS Recording (SVOS)

Ex R-00001\_2501011200\_REC.MP3 (Normal recording)  
R-00001\_2501011200\_VOS.MP3 (SVOS recording)

**⚠ Note:** If the battery fully dies, the device resets its internal date/time to 00:00 on Jan 01. Re-run the Time Setup tool after charging.

**File Storage & Format**